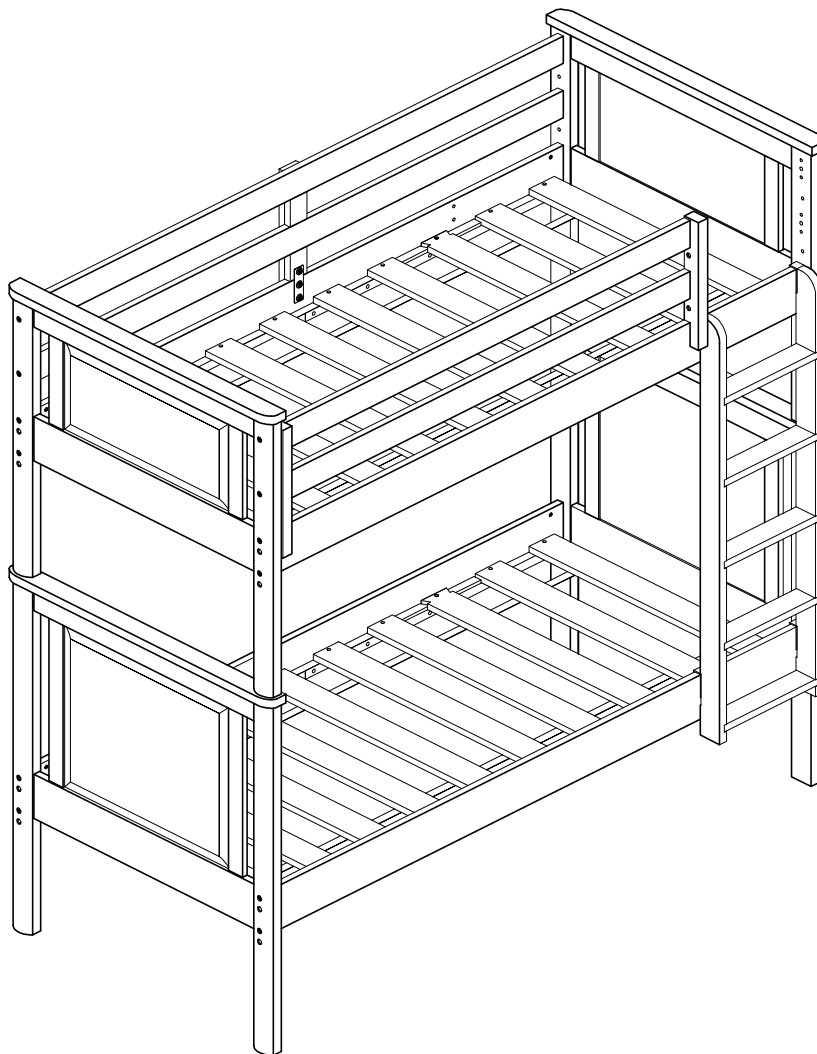


# orbelle.

**347 Clinton street  
Hempstead N.Y.11550  
SEE MORE: [www.orbelle.com](http://www.orbelle.com)  
TEL: 516-481-1500**

**BUNK BED: BB302/33, BB302/39**














**WARNING !!!**

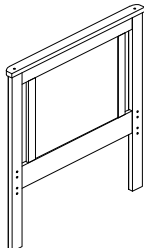
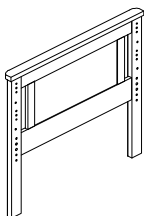
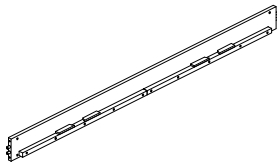
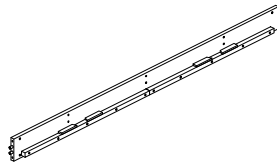
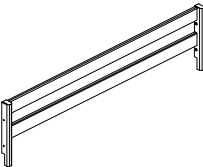
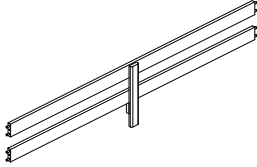

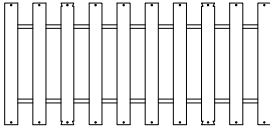
**Use on the top Bed a maximum 6" thick Mattress  
MADE IN VIETNAM**

# ASSEMBLY INSTRUCTION

## ONE BAG OF HARDWARE WITH FOLLOWING:


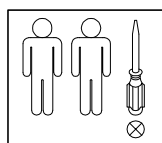
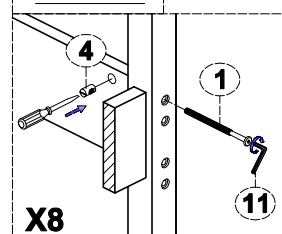
<b>1</b> Long Bolt	<b>2</b> Medium Bolt	<b>3</b> Short Bolt	<b>4</b> Barrel nuts	<b>5</b> Wooden plug
				
1/4" x 95mm (16 pcs)	1/4" x 60mm (6 pcs)	1/4" x 20mm (6 pcs)	Ø9 x 15mm (1/4") (16 pcs)	Ø12 x 10mm (4 pcs)
<b>6</b> Metal dowel	<b>7</b> Metal support	<b>8</b> Ladder hooks	<b>9</b> Short Screw	<b>10</b> Long Screw
				
Ø10 x 90mm (4 pcs)	3 x 32 x 98mm (2 pcs)	70 x 25 x 48mm (4 pcs)	Ø4 x 20mm (12 pcs)	Ø4 x 25mm (40 pcs)
<b>11</b> Allen Key				
				
58 x 23 x 4mm (1 pc)				

## PLEASE LOCATE AND CONFIRM YOU HAVE THE FOLLOWING PARTS:

<b>A</b> Headboard	<b>B</b> Footboard	<b>C</b> Side rail Headboard	<b>D</b> Side rail Footboard
			
(2 pcs)	(2 pcs)	(2 pcs)	(2 pcs)
<b>E</b> Front Guard	<b>F</b> Back Guard	<b>G</b> Ladder	<b>H</b> Slats
			
(1 pc)	(1 pc)	(1 pc)	(2 sets)

**STEP 1, 2:**

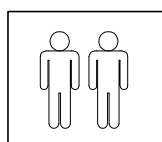
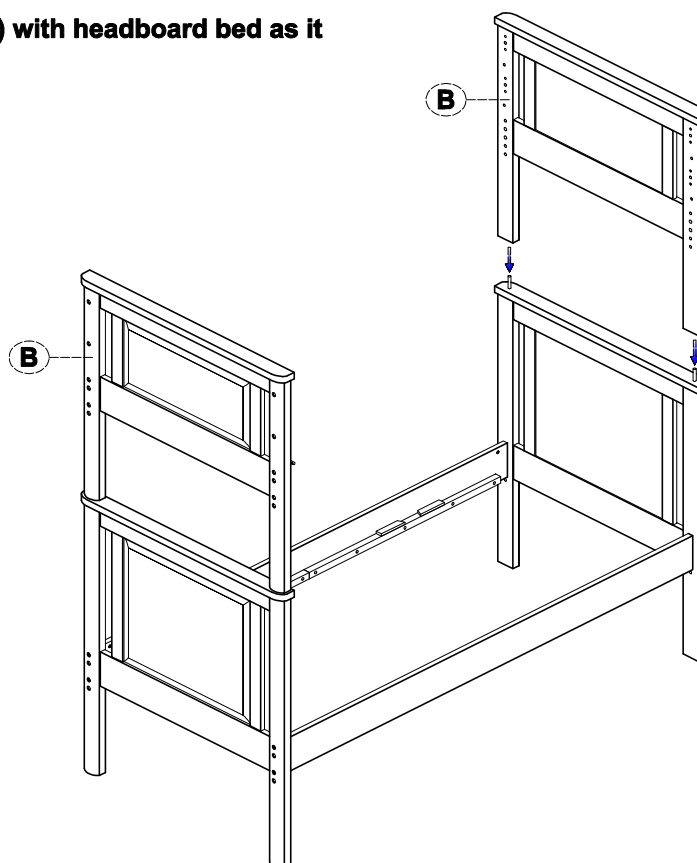
Put the Headboard (A) beside the wall and attach the side rail headboard (C) joining to the headboard by Long bolt 1/4"x95 (1) and Barrel nuts (4) after that tighten bolts by allen key (11). Attach 4pcs metal dowels (6) into the holes joining bed.

**STEP 2****STEP 1**

11		1X	58x23x4mm
6		4X	Ø10 x 90mm
4		8X	Ø9 x 15mm (1/4")
1		8X	1/4"x95mm

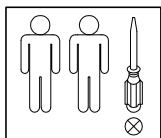
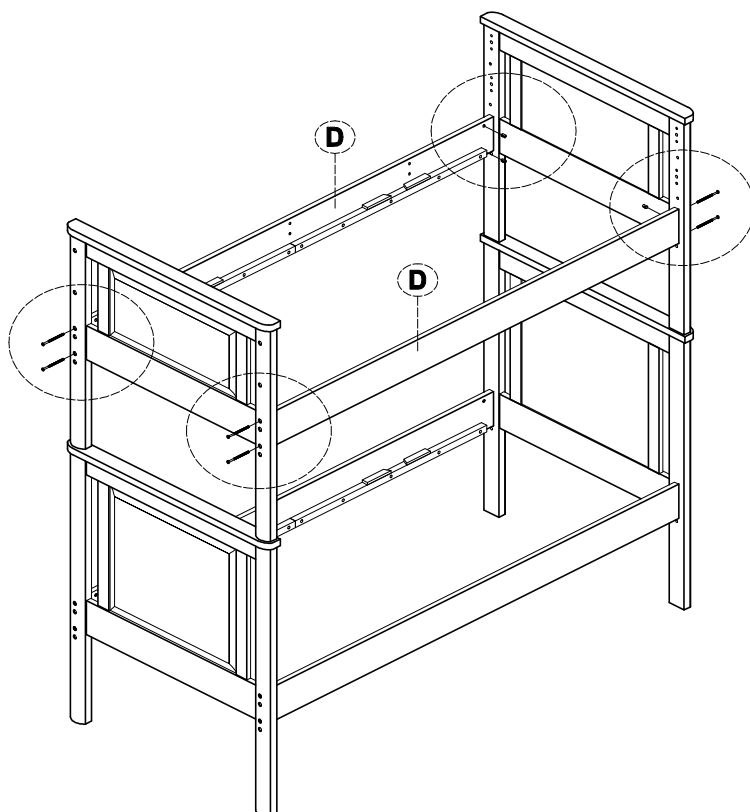
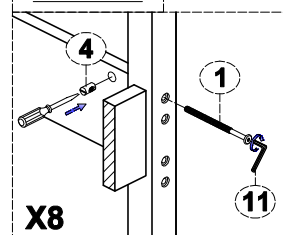
**STEP 3:**

Joint the Footboard (B) with headboard bed as it below the picture.



**STEP 4:**

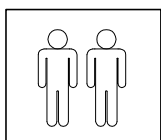
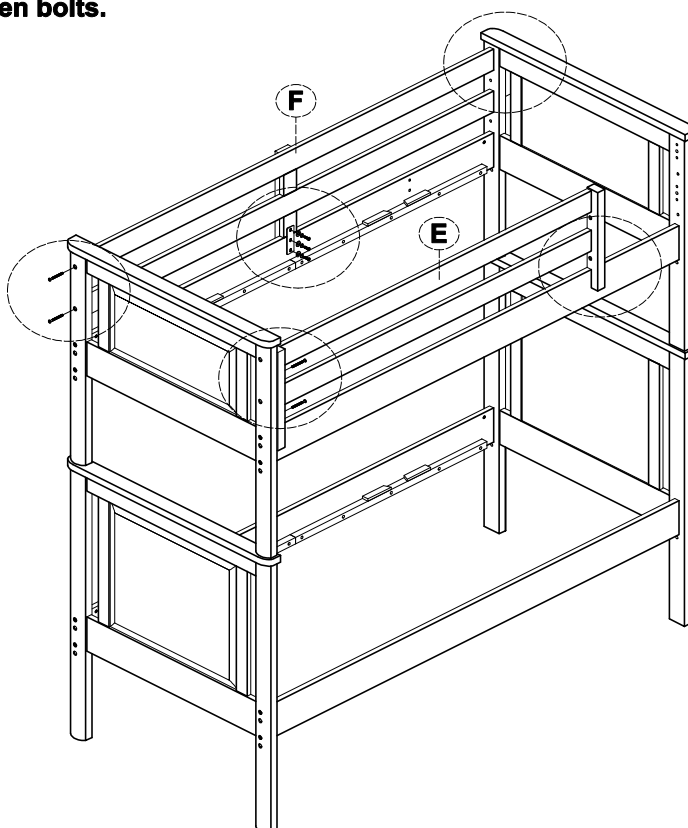
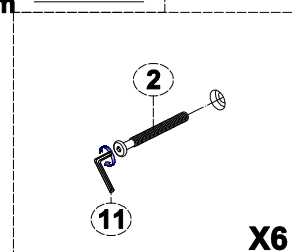
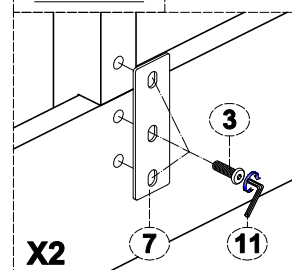
Attach the side rail footboard (D) with Footboard (B) by Long bolt 1/4"x95 (1) and Barrel nuts (4) by allen key (11). Do not fully tighten bolts.

**STEP 4****X8**

11		1X	58x23x4mm
4		8X	Ø9 x 15mm (1/4")
1		8X	1/4"x95mm

**STEP 5, 6:**

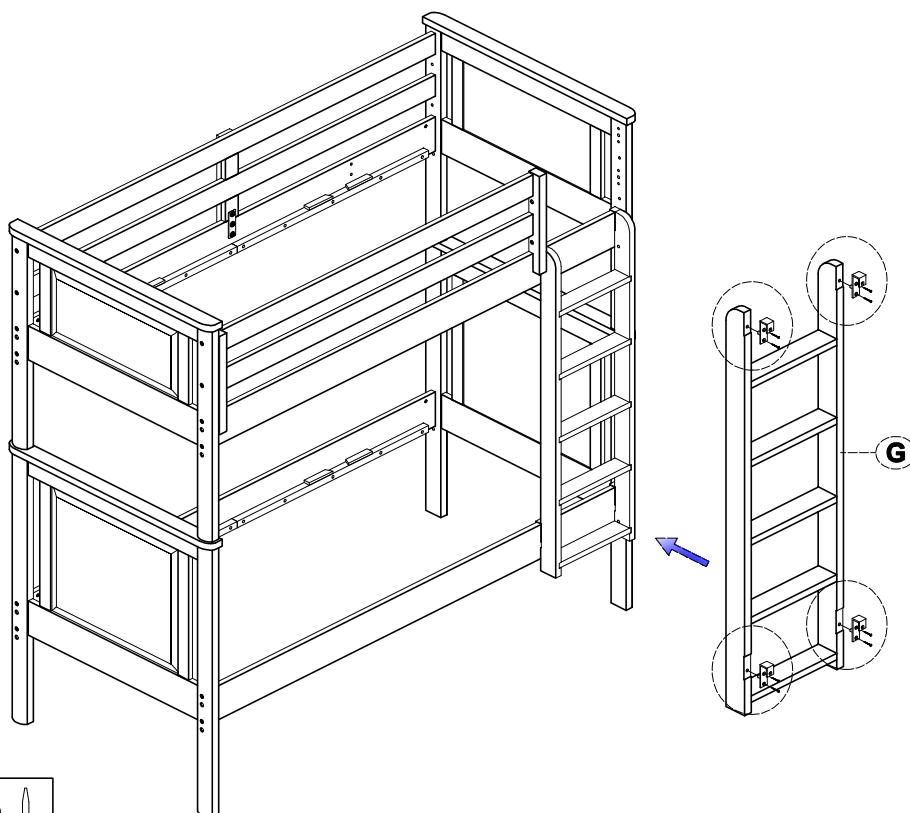
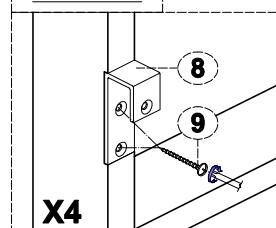
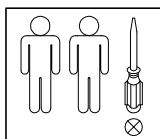
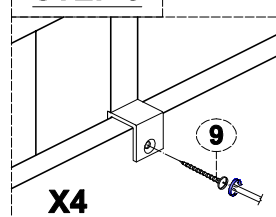
Attach the back guard rails (F) and front guard rails (E) with Footboard using Medium bolt 1/4"x60 (2), and Metal support (7) using short bolt 1/4"x20 (3) by allen key (11). Fully tighten bolts.

**STEP 5****X6****STEP 6****X2**

11		1X	58x23x4mm
7		2X	3 x 32 x 98mm
3		6X	1/4"x20mm
2		6X	1/4"x60mm

**STEP 7, 8:**

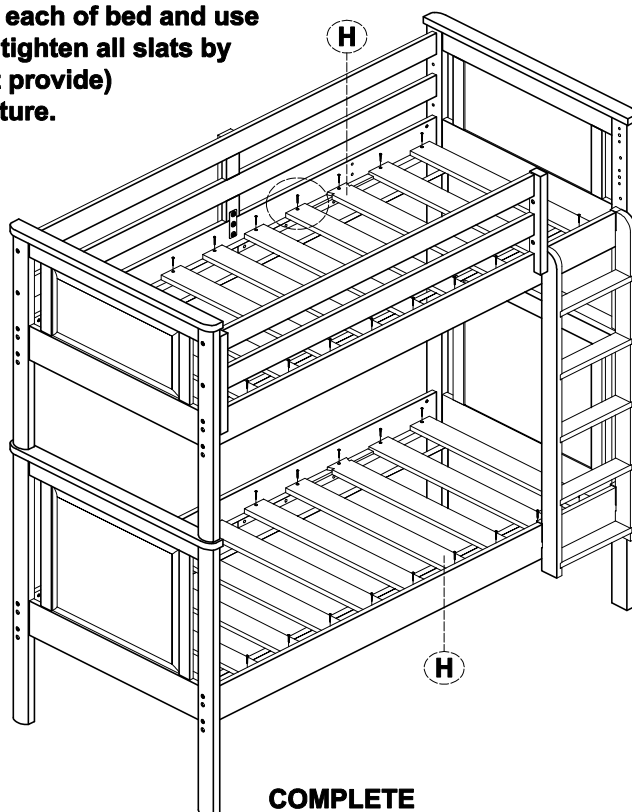
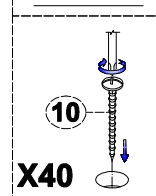
Attach the ladder (G) with the bunk bed, using screws (9), ladder hooks (8) and tighten by screwdriver (not provide) as the below picture.

**STEP 7****STEP 8**

8		4X	70x25x48mm
9		12X	Ø4 x 20mm

**STEP 9:**

Put slats (H) for each of bed and use screws (10) and tighten all slats by screwdriver (not provide) as the below picture.

**STEP 9**

10		40X	Ø4 x 25mm
----	--	-----	-----------

**Note: Ladder can change left and right.**

