

GABBY TRUNDLE

Follow warnings on all products in a trundle.

Adult assembly required.

Small parts may present choking hazard prior to assembly.

Enclosed please find simple step-by-step instructions to help you quickly assemble your products. Before you begin we recommend that you following the steps below:

- 1. Please read the instructions thoroughly**
- 2. Identify all parts and hardwares**
- 3. You will need the following tools:**

Philips head screw driver


Flat head screw driver

Hammer

Do Not Use Power Drills or Drivers

To protect your parts during assembly please place them on a soft surface.

To clean surface use only water on a damp cloth. Do not use window cleaners or cleaning abrasives as it will scratch the surface and could damage the protective coating.

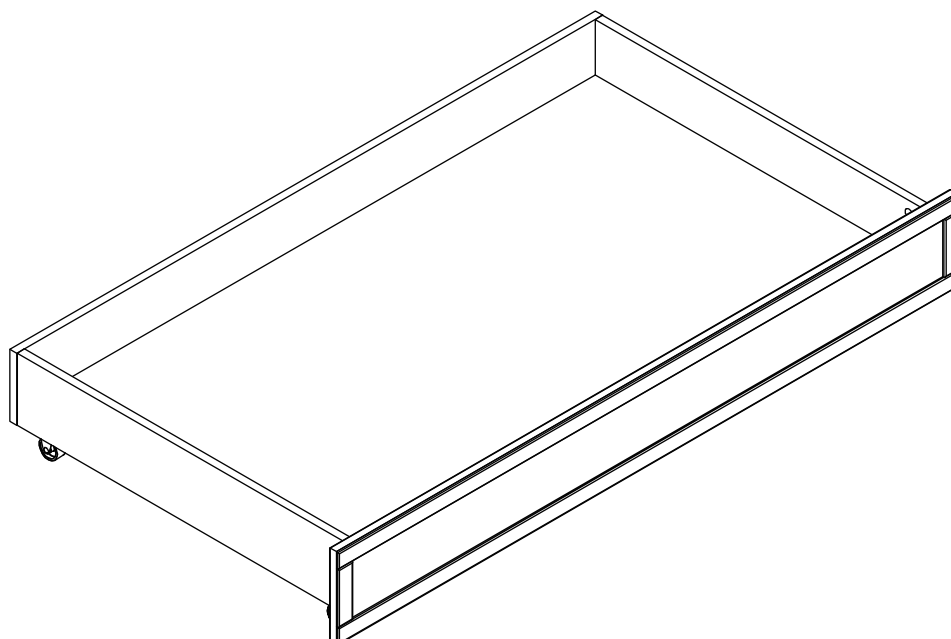


MADE IN CHINA

CONNECTION HARDWARE




a: Metal pin (6pcs)




b: Cam lock (6pcs)



c: Wood dowel (18pcs)




d: M4*30 Screw(4pcs)

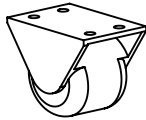

e: Castors(4pcs)



f: M4*12 Screw(16pcs)

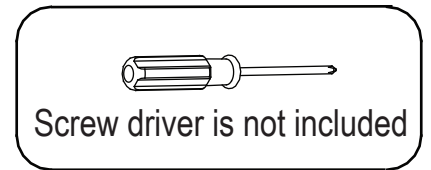

PARTS ENCLOSED IN CARTON

Bottom drawer (1 pc)

A: Drawer front panel (1 pc)

B: Drawer left panel (1 pc)


C: Drawer right panel (1 pc)

D: Drawer back panel (1 pc)


E: Drawer bottom panel (1 pc)

F: Drawer bottom middle support bars (1 pc)

G: Drawer bottom support bars (4 pcs)

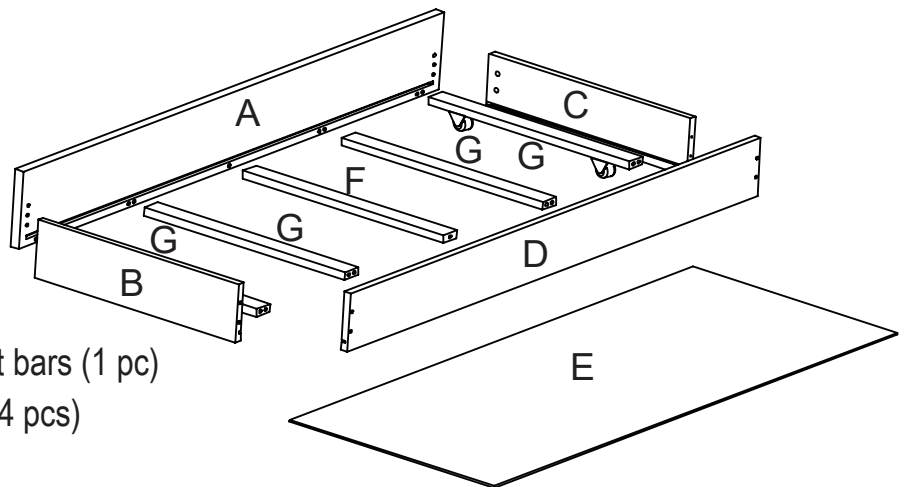


STEP 1

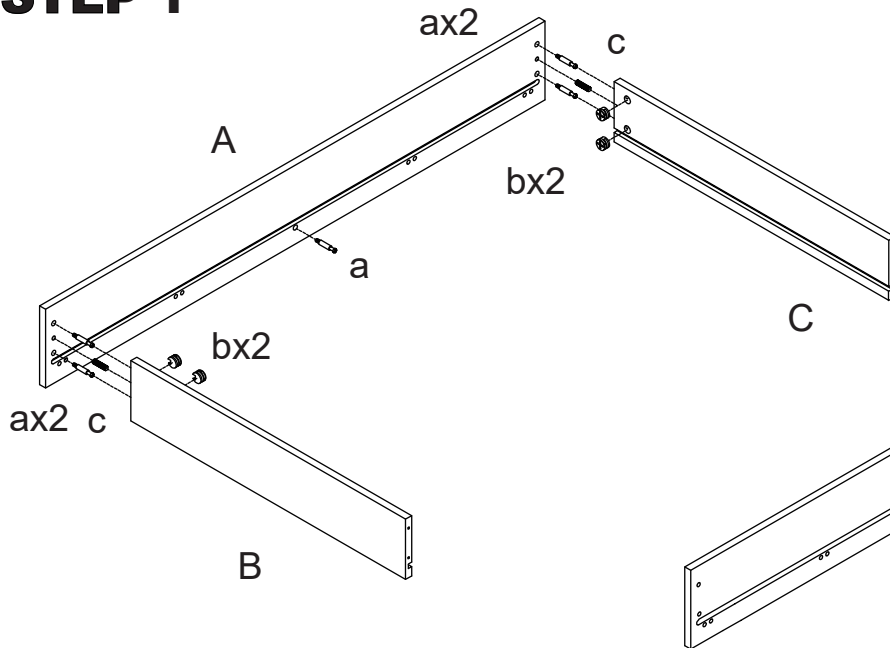


Attach The left panel (B) and right panel (C) to Drawer front panel (A) (D) using Cam lock(b), Metal pin(a) and wood dowel(c).

STEP 2

Attach bottom middle support bar (F) to the Drawer front panel (A) by using Metal pin(a) and Cam lock(b). Attach bottom support bars (G) to the Drawer front panel (A) by using wood dowel(c).

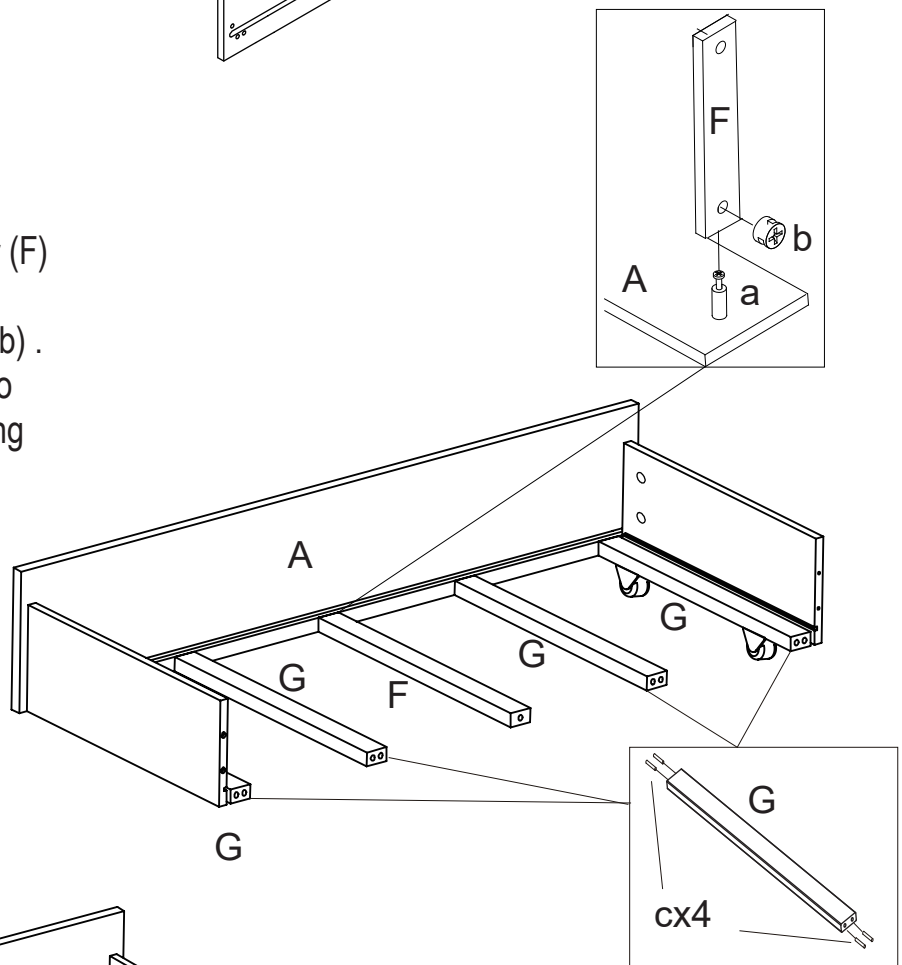


STEP 3

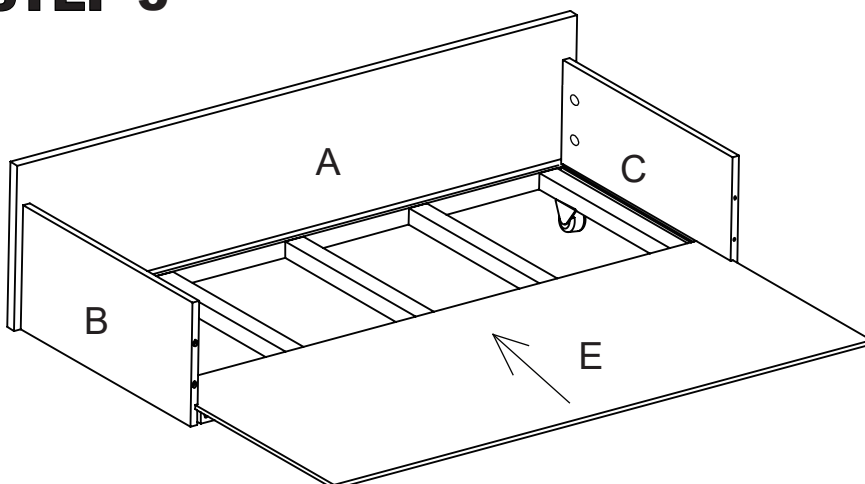

Insert the drawer bottom panel(E) into the grooves of side panels (B&C)and drawer front panel(A)

STEP 4

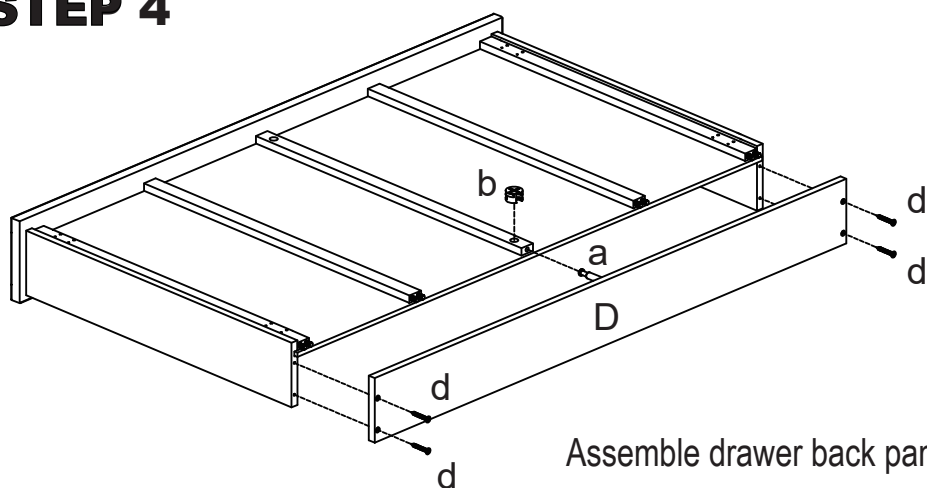

Assemble drawer back panel(D) using the screws (d)(b)

STEP 5 Slide the drawer at the bottom of the crib

