




347 Clinton Street
Hempstead NY 11550
Tel : 516-481-1500
See More : www.orbelle.com


MIRROR MODEL 3006

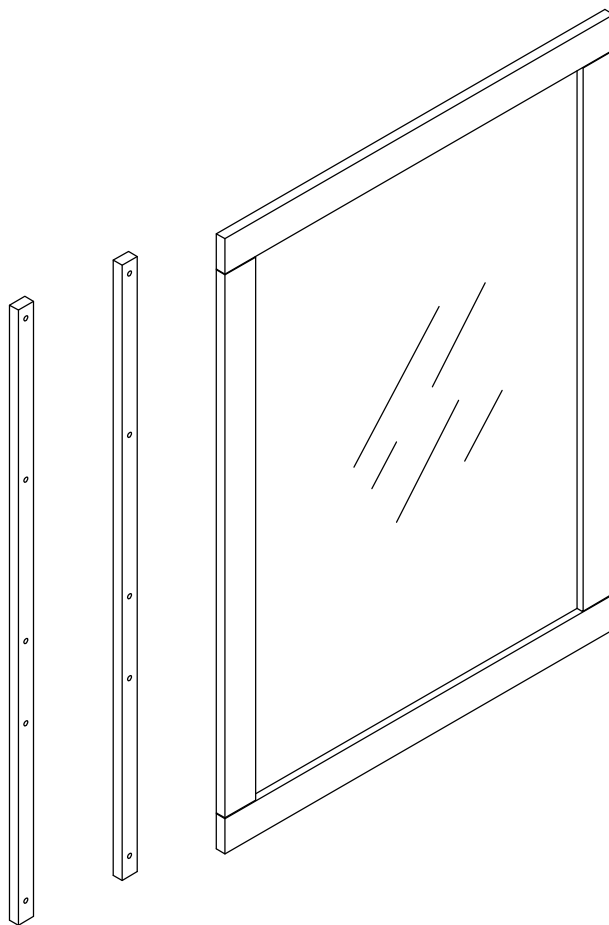

ONLY FOR ILLUSTRATION

MADE IN MALAYSIA

ASSEMBLY INSTRUCTIONS

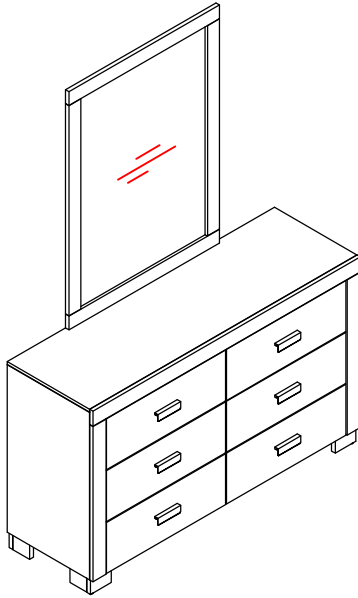

ASSEMBLY TIPS

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.




Warning !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.


HARDWARE LIST



(1) WOOD SCREW
M4.0 x 28mm
8pcs






(2) WOOD SCREW
M3.5 x 16mm
4pcs

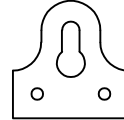


(3) FRAME HOOK
2pcs


COMPONENT LIST

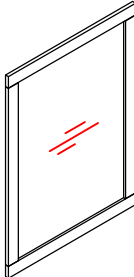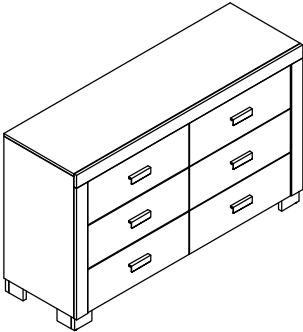A	 MIRROR	1 set	
B	 DRESSER	1 set	
C	 SUPPORT BAR	2 pcs	


STEP 1

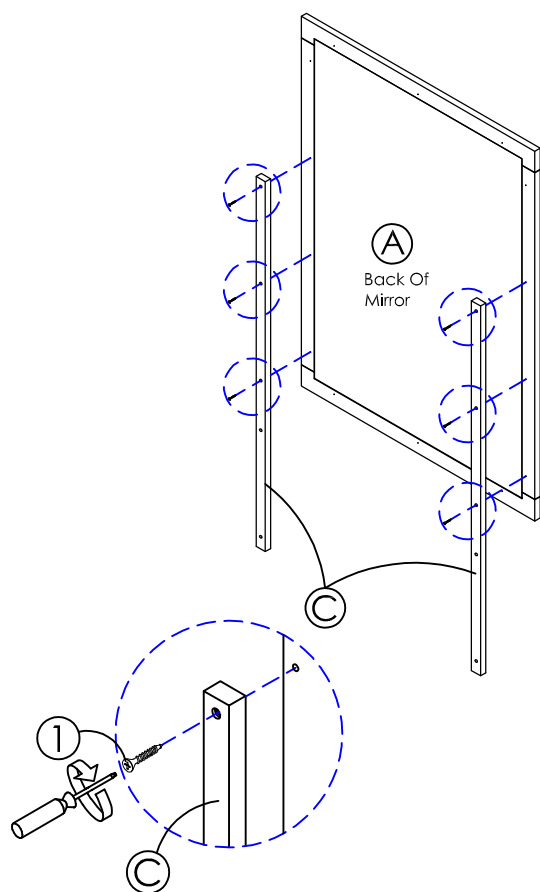


STEP 2

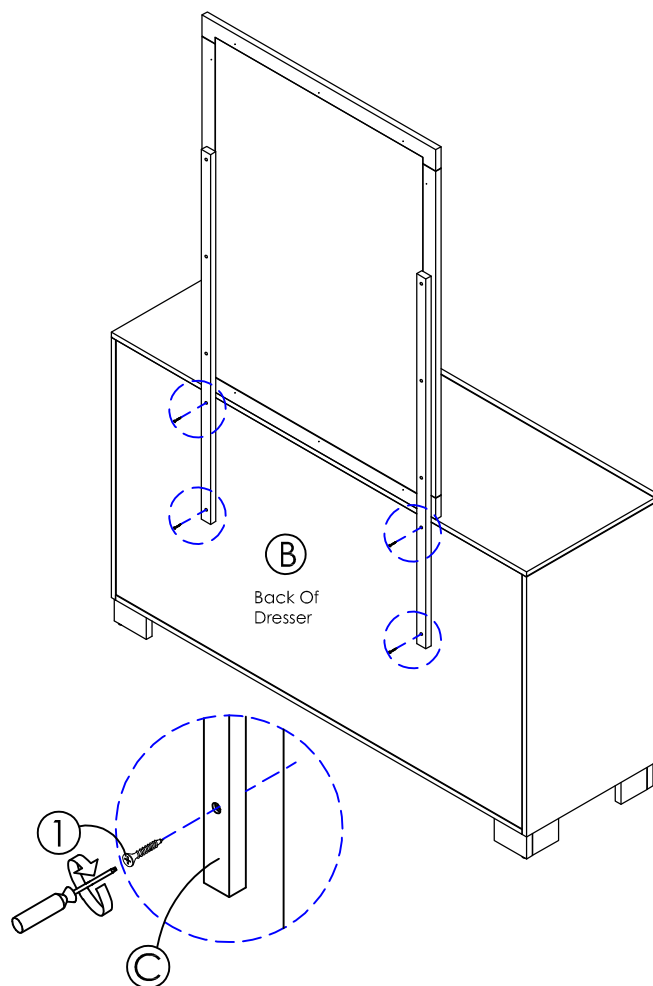


COMPLETE ASSEMBLY (VERTICAL MIRROR POSITION)

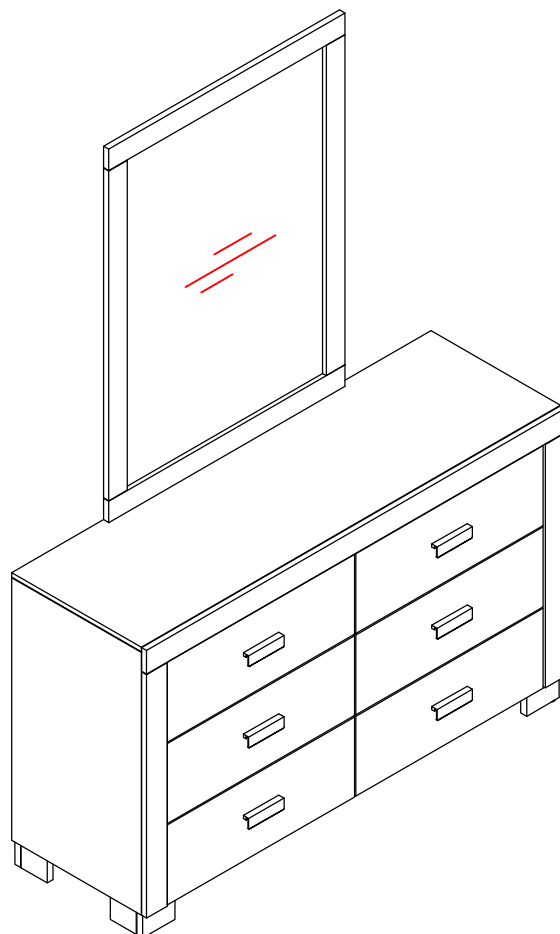


STEP 1

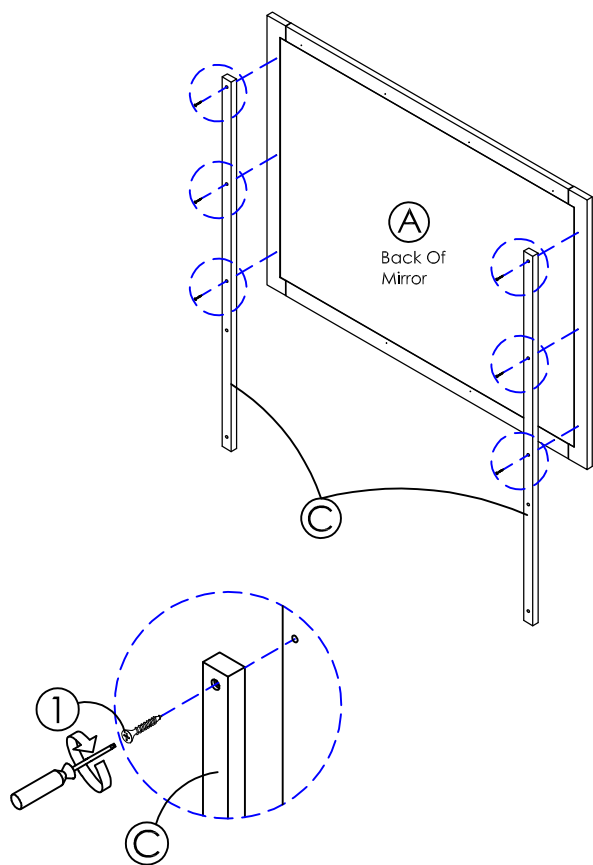


STEP 2

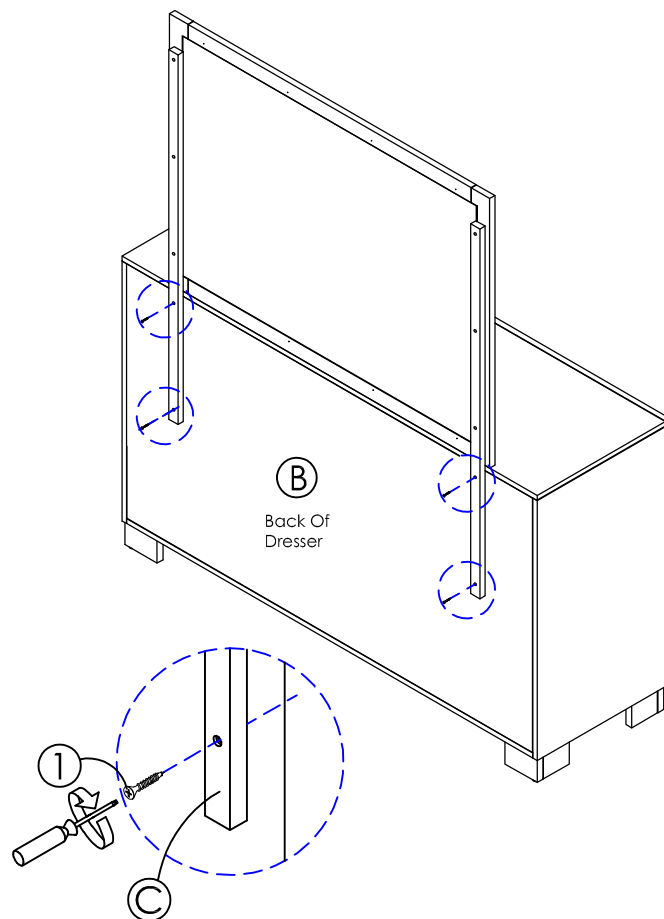


COMPLETE ASSEMBLY (HORIZONTAL MIRROR POSITION)

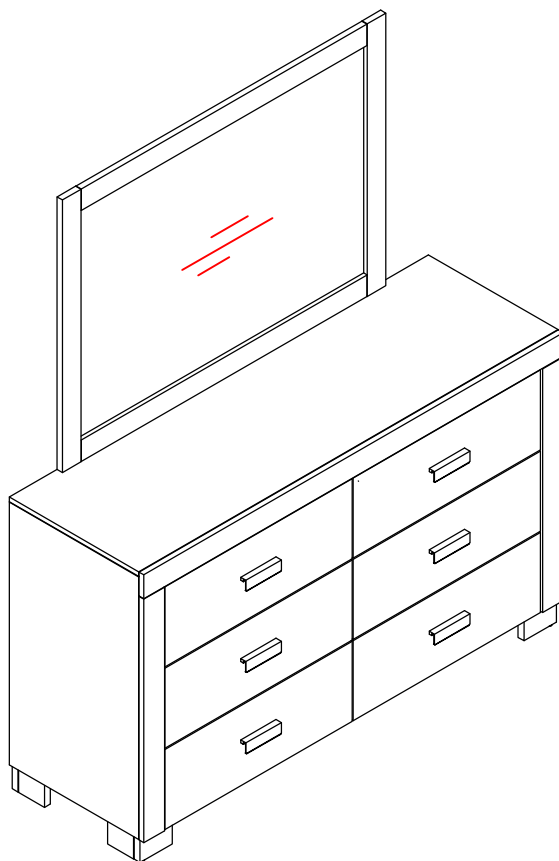


STEP 1

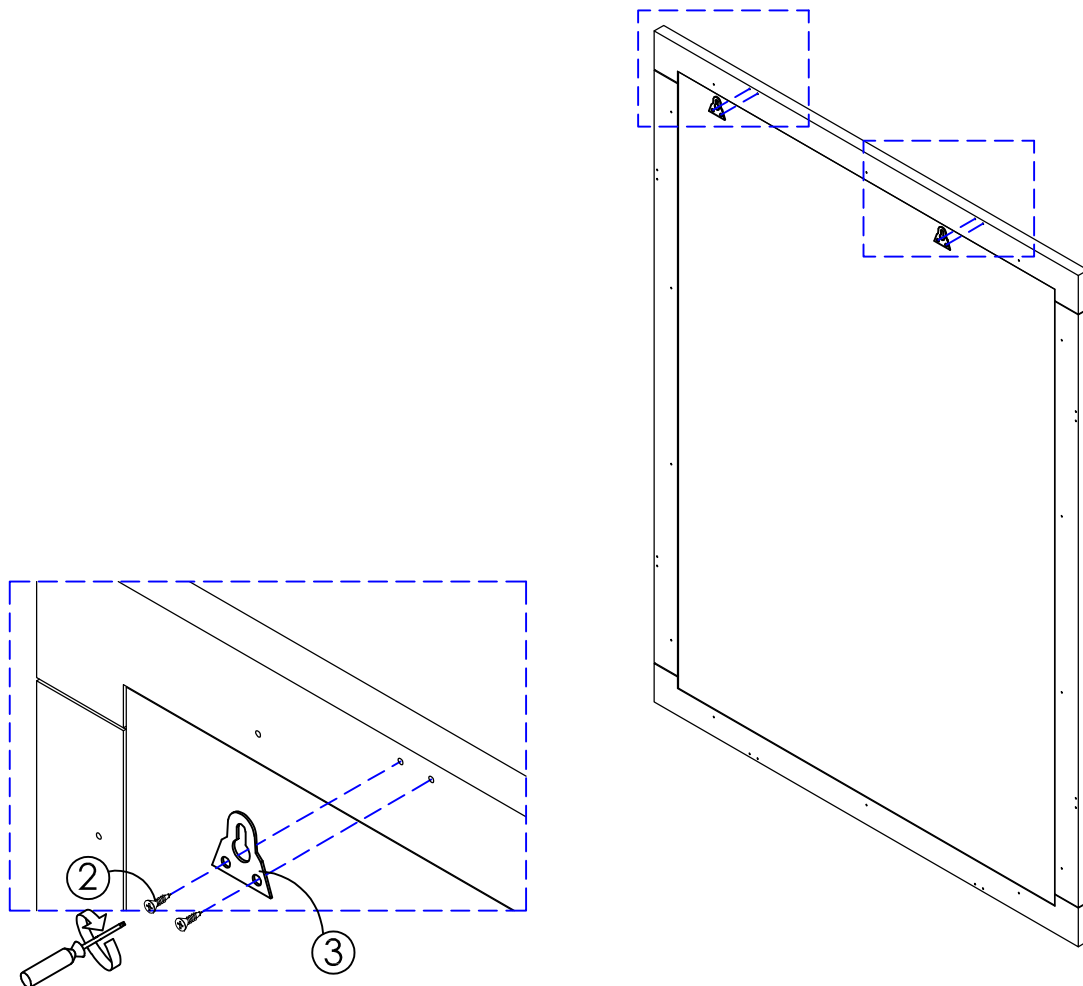

COMPLETE ASSEMBLY (VERTICAL MIRROR POSITION USING FRAME HOOK)

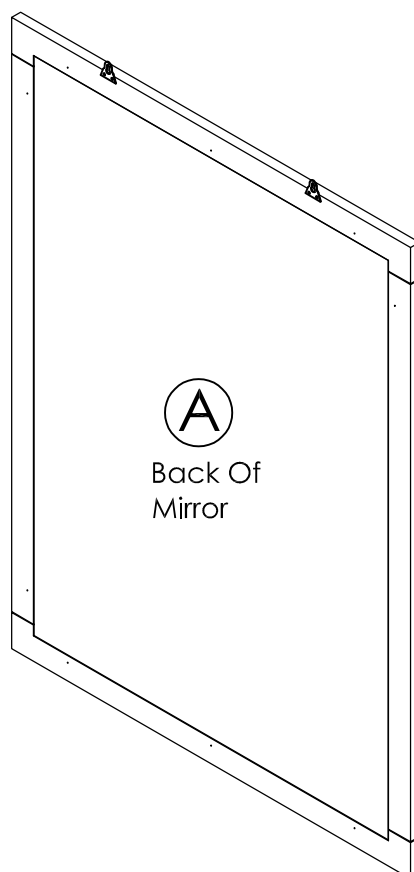

STEP 1

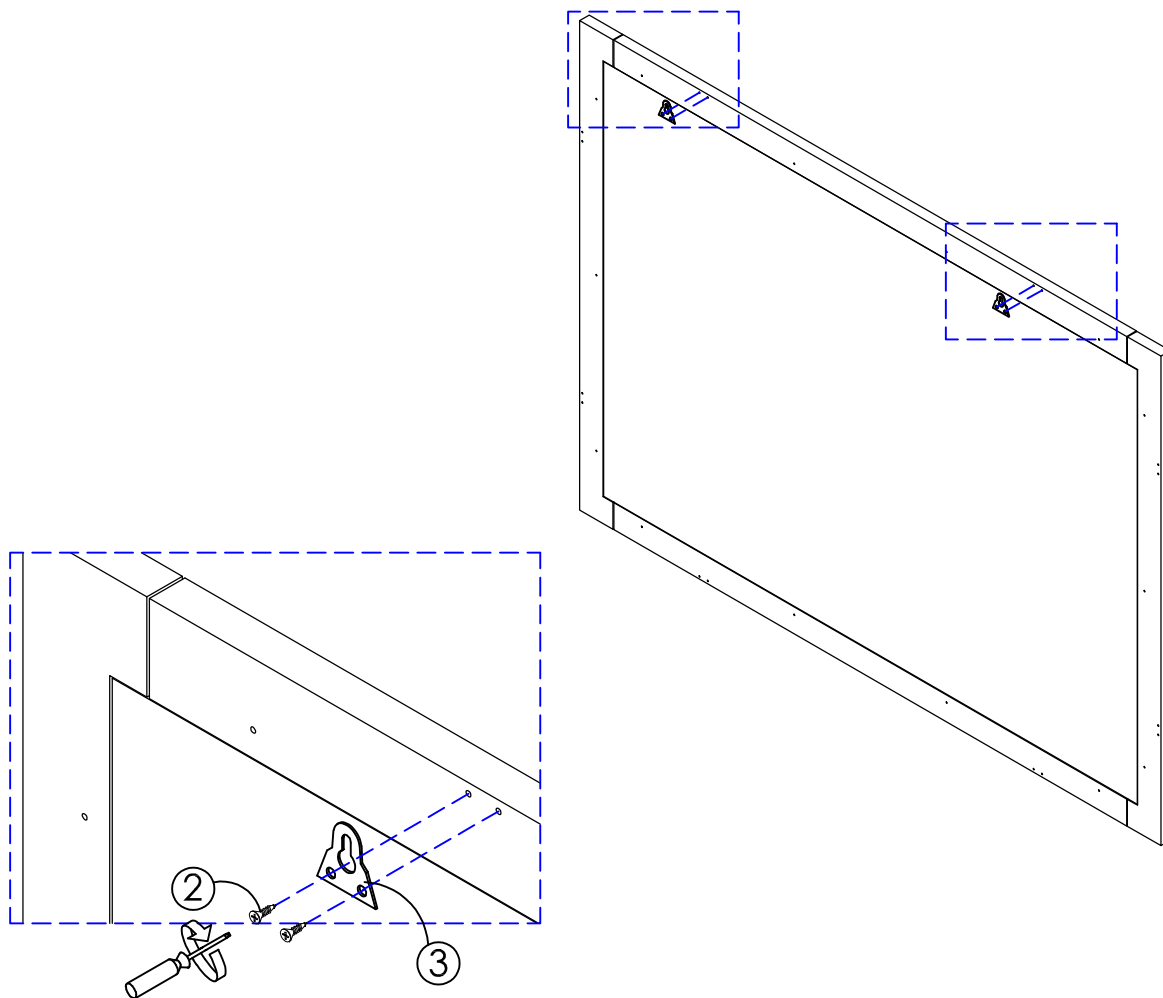

COMPLETE ASSEMBLY (HORIZONTAL MIRROR POSITION USING FRAME HOOK)

